

TV VALVE



TV - 11 - Ed 5 - April 2007

This is a general specification leaflet; for specific applications not covered herein, contact Suntec.


The SUNTEC TV valve is a pressure regulating valve.


APPLICATIONS

- Light and heavy oil.
- Capacity up to 5000 l/h.
- May be used with the SUNTEC T pump.

VALVE OPERATING PRINCIPLE

The pressure of the nozzle line is adjusted with the adjusting screw of the TV valve. The oil in excess to nozzle requirement is dumped to the return.

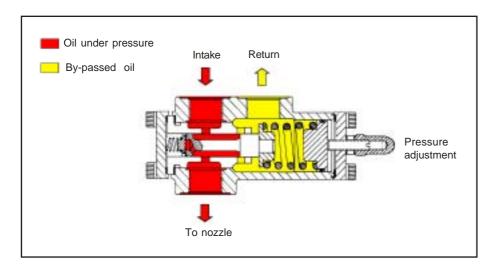


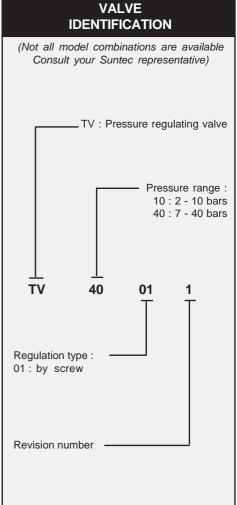

INSTALLATION

Two pipe system: oil in excess is returned to tank.

One pipe system: oil in excess is returned to pump suction.

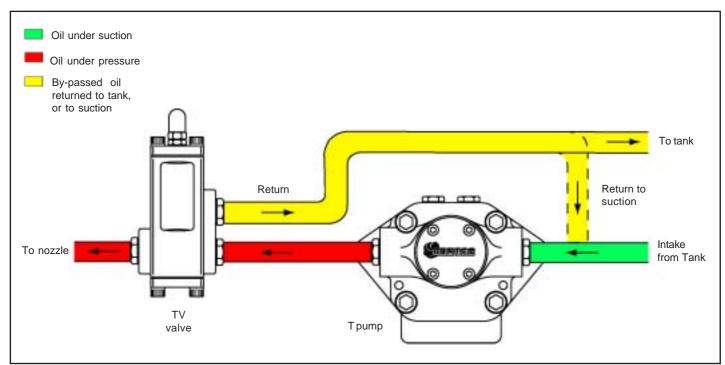

TECHNICAL DATA

General

| Connection threads | Cylindrical according to ISO 228/1 |
|--------------------|------------------------------------|
| Inlet | G 3/4 |
| Nozzle outlet | G 3/4 |
| Return | G 3/4 |
| Weight | 3 kg |

Hydraulic data


| Pressure ranges | 10: 2 - 10 bars |
|---------------------|---------------------------------------|
| | (delivery pressure setting : 7 bars) |
| | 40: 7 - 40 bars |
| | (delivery pressure setting : 20 bars) |
| Operating viscosity | 3 - 75 mm ² /s (cSt) |
| | (Higher viscosity oil can be used |
| | by heating the oil |
| | to lower its viscosity under 75 cSt) |
| Oil temperature | 0 - 150°C max. in the valve. |

MOUNTING POSITION


TV valve may be mounted in any position.

PRESSURE ADJUSTMENT


Remove cap-nut **1** and washer **2**, unscrew lock-nut **4**. To increase pressure, turn adjusting screw **3** clockwise. To decrease the pressure, turn screw anticlockwise. Block lock-nut **4**, refasten washer **2** and cap-nut **1**.

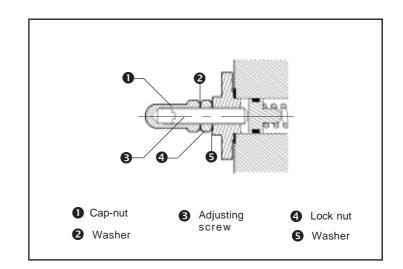

DIMENSIONS

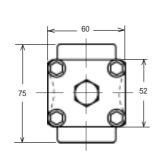

1 Intake or nozzle outlet

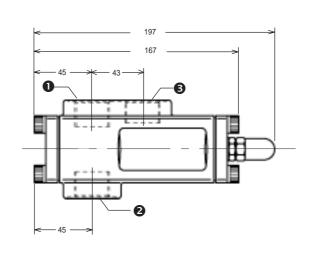

2 Nozzle outlet or intake

Return